

Landscape Installation


1.




2. Attach the landscape spike to the speaker.



3. Connect the wire to the speaker and attach the top cover to the speaker.

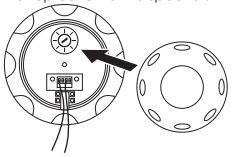


4.

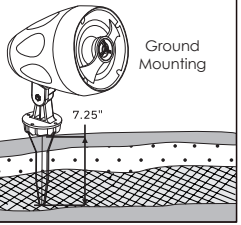

5. Connections (For Speakers with Transformer)
Ensure that the speaker is unplugged from the mains before making any connections.

For the Ground 6T (from power amplifier to next speaker)



SPECIFICATIONS

Model	**Ground 6T**
Woofer	**6.5" PP Cone**
Tweeter	**1" Silk Dome**
Frequency Response	**100Hz-20kHz**
Sensitivity(1M/1W)	**85dB**
Nominal Impedance	**8Ω**
RMS Power	**40W**
Transformer	**C70V: 2.5W-5W-10W-20W-NC & 8Ω, C100V: 5W-10W-20W-40W-NC & 8Ω**
IP Level	**IP 66 (Wall/Floor Speaker Only)**
Product Dimensions	**208 x208x280mm (8.2"x 8.2"x 11")**

CARE AND MAINTENANCE

·Turn off the power to the speaker when unused for long periods of time.
·Ensure all equipment is turned OFF prior to cleaning.
·Surfaces and cabinet need only occasional dusting/cleaning. Never touch the speaker drivers. Never use chemicals or solvents as they may damage the surface. Always clean using a dry cloth.

AUDIBAX

GROUND 6T

Please read the manual before using the product

SAFETY INSTRUCTIONS


1. Please read the instructions carefully before installation and use. Keep the manual safe for future reference.
2. Prior to installing the speakers into any ceiling or wall, check the structure for weight bearing ability and avoid contact with any wiring or plumbing that might be behind the surface area. Installing on soft materials or in areas incapable of supporting the speakers' weight may cause personal injury or damage to the speaker.
3. Make sure the speaker is properly secured to the ceiling/wall. Please use the proper screws, bolts, or anchors (not included). Failure to do so may cause the speaker to become unsecured and cause potential damages/injuries.
4. Use only approved and certified wiring in your installation, do not stretch or place the wire in contact with sharp objects.
5. Damage to the woofer and tweeter may occur if the speaker is dropped or hit - resulting in no sound or distorted sound.
6. Never overdrive your speakers to the point of distortion and always reduce volume prior to switching input sources (e.g.: FM to CD).
7. When installing the speakers outside, choose areas such as the underside of eaves to avoid strong direct sunlight which may affect the color and life of the speaker enclosure.
8. When placing the speakers on a wall or shelf, it is recommended that speakers be installed at the level of the ear or slightly higher.
9. To tilt the speaker, loosen the adjustment screw found on the bracket. Tilt the speaker to the desired position and tighten the screws securely. The speaker is not recommended to rotate after installation due to its weight.
10. Prior to removing cables ensure all power to your amplifier and other components is turned OFF.

PACKING LIST


Speaker



User manual

Accessories for Wall Mounting

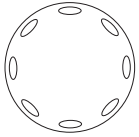

end cap


adjustable stand



screws X4



buckle part


Accessories for Pendant Hanging

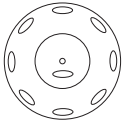
top cover



eye bolt & nut

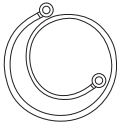
hanging cable


carabiner X2


buckle part

Accessories for Landscape Installation


end cap



landscape spike


adjustable stand


screws X5


INSTALLATION

Wall Mounting

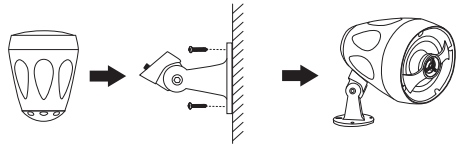

Hanging

1. Connect the wires from the amplifier (or the previous speaker) to the supplied terminal block of the speaker, and ensure red wire to "+" and black wire to "–". Attach the top cover to the speaker.

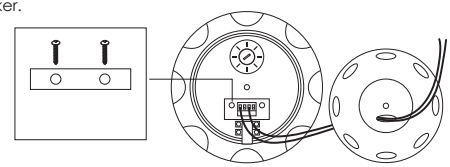

2. Route the speaker cable hanging from the ceiling area through the top cover, and dress the cables to the wire rope using plastic cable ties, strip the ends of the cables approximately 1/8" to 3/16" and, if the wire is stranded, twist the strands.
3. Fasten the provided eye bolt to the top cover and speaker.

Note: If mounting to the wall with the mounting bracket, mount the bracket using the appropriate hardware and securely attach to the wall.

